

## To Program Remote:

Turn Radio on (radio must be powered)

Select the FM tuner source (this will activate the program switch). Press and hold the button inside the stereo enclosure. While holding the button inside the enclosure, press and release any button on the remote.

The red indicator light on the remote will flash to indicate a button has been pressed.

The button inside can now be released and the remote is programmed.

Replacement remote # 12817


Remote System # 12816  
(1 remote & 1 receiver)

Red indicator light  
& day/night sensor




Buttons light up for 5 sec. when sensor detects low light and button is pressed



If the indicator light fails to come on when a button is pressed  
Replace batteries

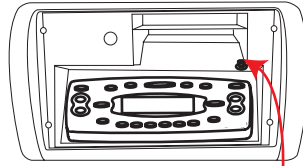


"REMOTE"  
Programming Switch

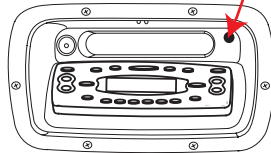


For battery replacement:  
Remove screws from the bottom side (8)  
and remove cover. Slide batteries out  
and insert new batteries as shown.

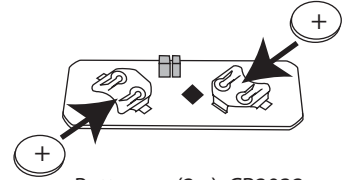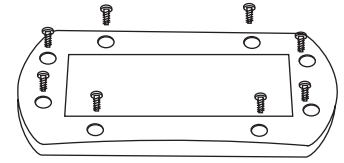

Battery = (2 x) CR2032

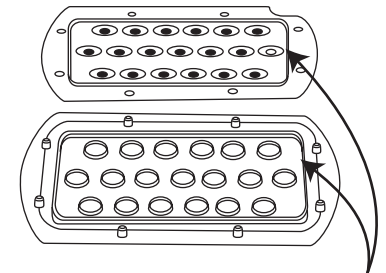

Upon reassembly: be sure that the rubber keypad gets "seated" back into the groove to ensure a watertight seal.

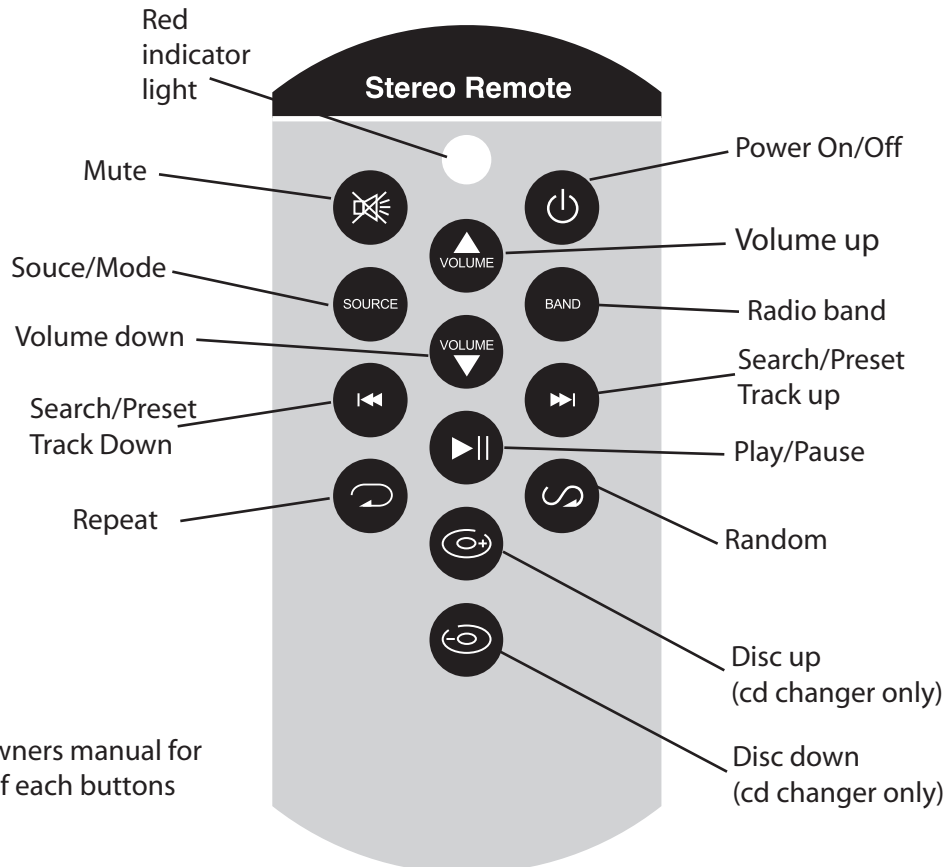

Refer to the in.tune owners manual for detailed description of each buttons function.